

#### Protect yourself and your vehicle with:

- + Roadside Assistance
- + Trip Interruption Coverage
- + Rental Reimbursement
- + Mechanical Breakdown Coverage

### **MPOWER+VEHICLE PROTECTION:** A wise investment for every vehicle.

**FREQUENCY OF REPAIRS** 

# **RISK** MILES MANUFACTURER'S WARRANTY TIME

### MPOWER+VEHICLE PROTECTION

#### **ADDITIONAL BENEFITS**

**ROADSIDE ASSISTANCE** - Benefits include towing, flat tire changes, jump starts, fluid delivery, lockout service, and concierge service. Your Vehicle Protection Plan will cover up to \$100 per occurrence (less the cost of parts or fluids required).

TRIP INTERRUPTION - You also have the added benefit of expense coverage for overnight stays and meals incurred if you are stranded due to the failure of a covered breakdown and you are more than 100 miles from your home. Your Vehicle Protection Plan provides up to \$75 per day (maximum of three days) for trip interruption.

**ALTERNATE TRANSPORTATION** - Your Vehicle Protection Plan provides up to \$35 per day (up to a maximum of \$175) for alternate transportation if your vehicle is in a repair facility undergoing repairs for a covered breakdown.

**UNLIMITED NUMBER OF CLAIMS** - The number of claims on your vehicle is unlimited. See your contract for details on payable claims.

**NATIONWIDE COVERAGE** - Your Vehicle Protection Plan is honored in both the United States and Canada. If you happen to be traveling, you can have peace of mind that repairs of a covered component will be taken care of for you. Just call our toll-free number for prior approval.





Administered by Enterprise Financial Group, Inc. or one of its affiliated companies

P.O. Box 167667, Irving, TX 75016-7667 Toll Free 800-527-1984

In Florida: Administered by Enterprise Financial Group of Florida, Inc. Florida License # 60102

The Vehicle Service Contract is underwritten by a national insurance company that is "A rated" (excellent) by A.M. Best Company. This information is for illustration purposes only. The actual coverage, exclusions and limitations of the contract may vary from state to state based on the program chosen by the customer.

© 2011 Enterprise Financial Group Inc.





# **Secure With Peace Of** Mind Coverage.

## MPOWER+VEHICLE PROTECTION



Premium works like your manufacturer warranty. It includes all parts and components except those listed below:

- + Exhaust system, catalytic converter, clutch assembly, shock absorbers, brake rotors and drums, tires, fan belts and filters; wheels, non-metallic hoses; brake pads and shoes; battery, battery cables, spark plug wires; distributor cap and rotor.
- + Coolants and lubricants, refrigerants, alignments, wheel balances, tune ups and other maintenance services.
- + Paint, carpet, trim, body panels, glass, physical damage, upholstery and weather strips.
- + Lenses, sealed beams and light bulbs.
- + Sheet metal, bright metal, bumpers, moldings; canvas, vinyl, fabric and fiberglass tops; air and water leaks, wind noise; squeaks and rattles.



~ Protect your dream ~

PLATINUM CURRENT +10 MODEL YEARS WITH LESS THAN 125K MILES

**ENGINE** - Cylinder block, cylinder heads, all internally lubricated parts, turbocharger, supercharger, harmonic balancer; timing gear, chain and belt; timing cover, intake and exhaust manifolds, valve covers, oil pan, engine mounts, belt tensioners, cam gear bolt, harmonic balancer bolt, and head bolts.

**TRANSMISSION** - Transmission case, all internally lubricated parts, torque converter, flywheel/flexplate, vacuum modulator, transmission mounts, transmission cooler, transmission oil pan, and transmission control module (TCM).

**TRANSFER CASE** - Transfer case, all internally lubricated parts, 4X4 actuator, and 4X4 sensors.

**DRIVE AXLES** - Drive axle housing, all internally lubricated parts, drive shafts, universal joints, constant velocity joints (unless failure was caused by neglected, torn, cracked, or perforated constant velocity joint boot), axle bearings, locking hubs, center support/carrier bearings, and differential cover.

**AC/HEATING** (includes only factory or dealer-installed equipment) - Condenser, condenser fan/motor, compressor, compressor clutch, compressor pulley, evaporator, accumulator, drier, expansion valve, idler pulley; A/C controls and module; heater core, and blower motor.

**SUSPENSION** - Control arms; control arm shafts, bearings and bushings; McPherson Struts, wheel bearings; spindles and supports; ball joints; king pins and bushings; radius arm and bushings; stabilizer bar; links and bushings; torsion bars, hub assembly, coil springs and leaf springs.

**STEERING** - Steering gear box/rack, all internally lubricated parts, power steering pump, pitman arm, idler arm, tie rod ends, drag link, steering column shaft, and column couplings.

**COOLING** - Water pump, radiator, cooling fan, cooling fan motor, fan clutch, radiator fan shroud, and coolant recovery tank.

**FUEL SYSTEM** - Fuel delivery pump, fuel injection pump, fuel injectors, fuel tank, metal fuel lines, fuel pressure regulator, fuel sending unit, fuel gauge, idle air control (IAC) valve and motor, engine control module (ECM), and fuel injection sensors.

**BRAKE** - Master cylinder, power brake cylinder, vacuum assist booster, calipers, wheel cylinders, compensating valve, anti-lock brake system (ABS); hydraulic lines and fittings; and parking brake actuator.

**ELECTRICAL** - Alternator, ignition coil, horns, distributor, starter motor, starter solenoid, starter drive, windshield wiper motors, windshield wiper linkage, windshield washer pump, power seat motor, power antenna motor, power window motors, window regulators, power door locks, power door lock actuators, power trunk release, wiring harnesses, cruise control assembly, ignition lock cylinder, all manually operated switches, sunroof motor, convertible top motor, and driver information gauges.

**ENGINE** - Cylinder block, cylinder heads, all internally lubricated parts, turbocharger, supercharger, harmonic balancer; timing gear, chain and belt; timing cover, intake and exhaust manifolds, valve covers, oil pan and engine mounts.

**TRANSMISSION** - Transmission case, all internally lubricated parts, torque converter, flywheel/flexplate, vacuum modulator, transmission mounts and transmission oil pan.

**TRANSFER CASE** - Transfer case, all internally lubricated parts, and 4X4 actuator.

**DRIVE AXLES** - Drive axle housing, all internally lubricated parts, drive shafts, universal joints, and constant velocity joints (unless failure was caused by neglected, torn, cracked, or perforated constant velocity joint boot), axle bearings and locking hubs.

**AC/HEATING** (includes only factory or dealer-installed equipment) - Condenser, compressor, compressor clutch, compressor pulley and evaporator.

**SUSPENSION** - Control arm shafts, bearings and bushings; wheel bearings; spindles and supports; radius arm and bushings; stabilizer bar; links and bushings; torsion bars, hub assembly, coil springs and leaf springs.

**STEERING** - Steering gear box/rack, all internally lubricated parts, power steering pump, steering column shaft and column couplings.

**COOLING** - Water pump.

FUEL SYSTEM - Fuel delivery pump.

**BRAKE** - Master cylinder, power brake cylinder, vacuum assist booster, calipers, wheel cylinders and compensating valve.

**ELECTRICAL** - Alternator, starter motor, starter solenoid and starter drive.









**SEALS AND GASKETS** - The Vehicle Protection Plan provides coverage on leaking seals and gaskets on any covered part listed above. *Minor loss of fluid or seepage is considered normal and is not considered a Mechanical Breakdown.*